


3.3 Auto operation stop/restart

The following three methods can stop auto operation.

- (1) Press [STOP] key.
- (2) Press [Q.STOP] switch.
- (3) Press EMO switch.

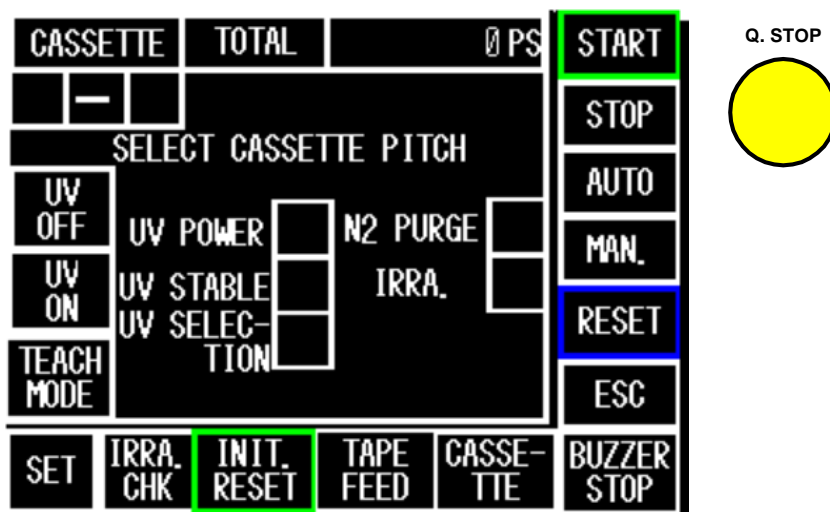

- (1) [STOP] key:
Pressing [STOP] key stops the machine after the wafers in processing have been put into the cassette.
<To restart auto operation>
Press [START] key on "MAIN SCREEN".
- (2) [Q. STOP] switch:
Pressing [Q. STOP] switch stops the machine promptly.
<To restart auto operation>
 - (1) Press [RESET] key on "MAIN SCREEN".
 - (2) Press [START] key on "MAIN SCREEN".
- (3) EMO switch:
Pressing EMO switch cuts the power off and stops the machine promptly.
<To restart auto operation>
 - (1) Remove materials, such as wafers and tools left in the machine.
 - (2) Pull the EMO switch to recover from the emergency stop state
 - (3) Perform 2.3 Power on and 3.3Auto operation stop/restart in the Installation manual.

3.4 Auto operation end procedure



Turn off [MAIN POWER] switch. The light of POWER is put out.