


## 4.3 Auto operation stop/restart

The following three methods can stop auto operation.

- (1) Press [STOP] key.
- (2) Press [Q.STOP] switch.
- (3) Press EMO switch.

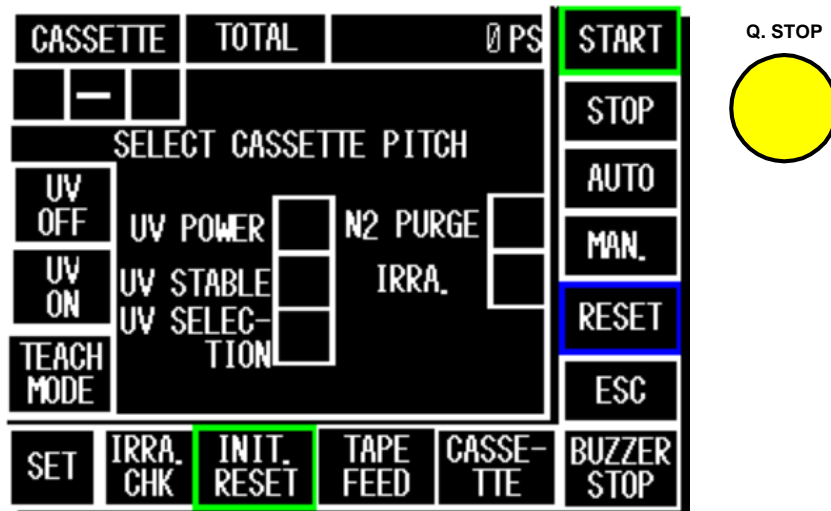

- (1) [STOP] key:  
Pressing [STOP] key stops the machine after the wafers in processing have been put into the cassette.  
<To restart auto operation>  
Press [START] key on "MAIN SCREEN".
- (2) [Q. STOP] switch:  
Pressing [Q. STOP] switch stops the machine promptly.  
<To restart auto operation>  
  - (1) Press [RESET] key on "MAIN SCREEN".
  - (2) Press [START] key on "MAIN SCREEN".
- (3) EMO switch:  
Pressing EMO switch cuts the power off and stops the machine promptly.  
<To restart auto operation>  
  - (1) Remove materials, such as wafers and tools left in the machine.
  - (2) Pull the EMO switch to recover from the emergency stop state
  - (3) Perform 4.1 Power on and 4.3 Auto operation stop/restart in the Operation manual.

#### 4.4 Auto operation end procedure



Turn off [MAIN POWER] switch. The light of POWER is put out.